

C13365 series

**Optical measurement modules for low-level-light detection,
Analog output**

The C13365 series are optical measurement modules capable of detecting low level light. These modules consist of an MPPC, a signal amplifier circuit, a high-voltage power supply circuit, and a temperature compensation circuit. The photosensitive area is available in two sizes of 1.3 × 1.3 mm and 3 × 3 mm, and the signal output is analog. Modules operate just by connecting them to an external power supply (±5 V).

Features

- ➔ Built-in MPPC (new product) for precision measurement
- ➔ High sensitivity in the short wavelength range
- ➔ Low noise equivalent power
- ➔ Built-in temperature compensation circuit
- ➔ Compact and lightweight
- ➔ Analog output

Applications

- ➔ Flow cytometry
- ➔ Low-level-light measurement
- ➔ Fluorescence measurement
- ➔ Analytical instrument

Structure

| Parameter | Symbol | C13365-1350SA | C13365-3050SA | Unit |
|-------------------------------|--------|---------------|---------------|------|
| Effective photosensitive area | - | 1.3 × 1.3 | 3 × 3 | mm |
| Pixel pitch | - | 50 | | µm |
| Number of pixels | - | 667 | 3600 | - |

Absolute maximum ratings

| Parameter | Symbol | Condition | Value | Unit |
|-----------------------|--------|-----------------------|------------|------|
| Supply voltage | Vs | | ±6 | V |
| Operating temperature | Topr | No dew condensation*1 | -20 to +60 | °C |
| Storage temperature | Tstg | No dew condensation*1 | -20 to +80 | °C |

*1: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Electrical and optical characteristics (Typ. Ta=25 °C, λ=λp, Vs=±5 V, unless otherwise noted)


| Parameter | Symbol | Condition | C13365-1350SA | | | C13365-3050SA | | | Unit | |
|---|-----------------------|--------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|----------------------|-----|
| | | | Min. | Typ. | Max. | Min. | Typ. | Max. | | |
| Spectral response range | λ | | 270 to 900 | | | 270 to 900 | | | nm | |
| Peak sensitivity wavelength | λp | | - | 500 | - | - | 500 | - | nm | |
| Temperature stability of output voltage | - | Ta=25 ± 10 °C | - | - | ±5 | - | - | ±5 | % | |
| Photoelectric sensitivity | - | | 0.7 × 10 ⁹ | 1.0 × 10 ⁹ | 1.3 × 10 ⁹ | 0.7 × 10 ⁹ | 1.0 × 10 ⁹ | 1.3 × 10 ⁹ | V/W | |
| Cutoff frequency | High band Low band | fc | -3 dB, sine wave | 3.5 | 5 | - | 3.5 | 5 | - | MHz |
| | | | | DC | | | DC | | | - |
| Rise time | tr | 10% to 90%, 1 p.e. | - | 5 | - | - | 9 | - | ns | |
| Noise equivalent power | NEP | Dark state | - | 0.5 | 1.0 | - | 1.2 | 2.0 | fW/Hz ^{1/2} | |
| Minimum detection limit | - | Dark state | - | 1 | 2 | - | 2.7 | 4.5 | pW rms | |
| Maximum output voltage | - | | - | 4.7 | - | - | 4.7 | - | V | |

Electrical characteristics

| Parameter | Symbol | Condition | Min | Typ | Max | Unit |
|---------------------|--------|-----------|-------|-----|-------|------|
| Supply voltage*2 | +Vs | | +4.75 | +5 | +5.25 | V |
| | -Vs | | -4.75 | -5 | -5.25 | |
| Current consumption | Ic | +Vs | - | +50 | +250 | mA |
| | | -Vs | - | -20 | -40 | |

*2: A power supply with 300 mA or higher output must be used.


Block diagram

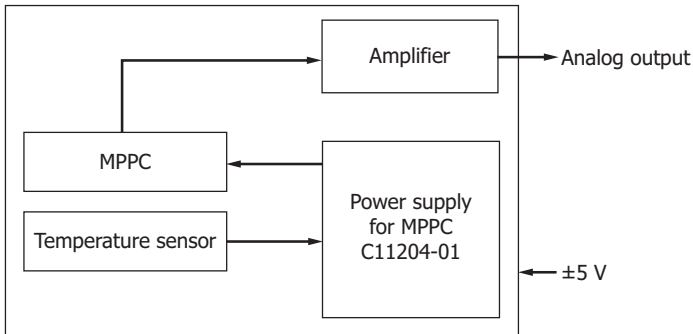

KACCC0675EA

Connection example

Using the supplied power cable, connect the MPPC module to a power supply. You can monitor the output waveform by connecting the MPPC module to an oscilloscope.

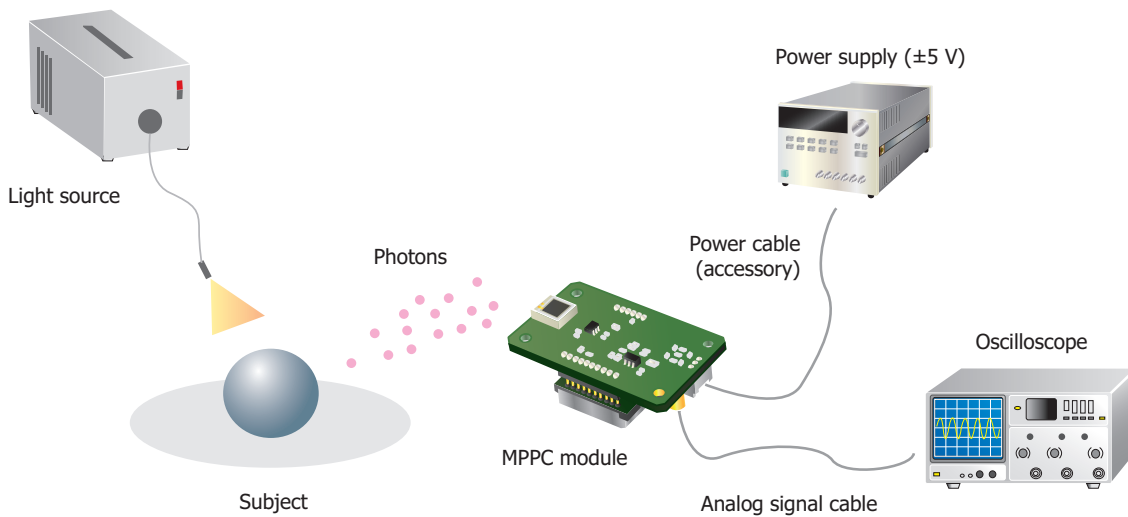


KACCC0765EA


Measurement example

Analog output

(Incident light level: 200 pW, $\lambda = \lambda_p$)

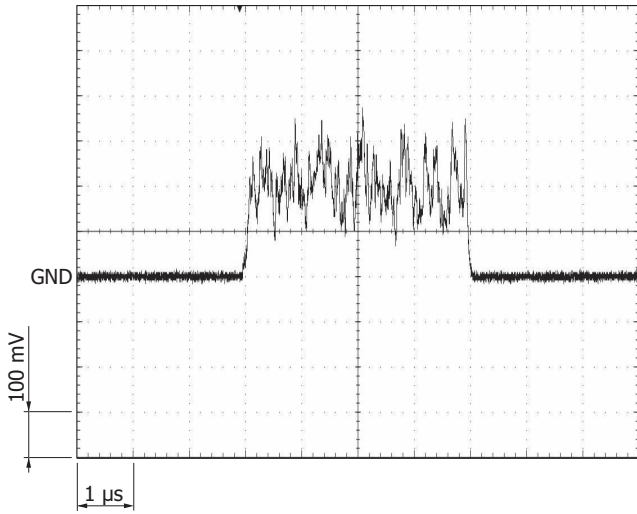


Photoelectric sensitivity vs. wavelength

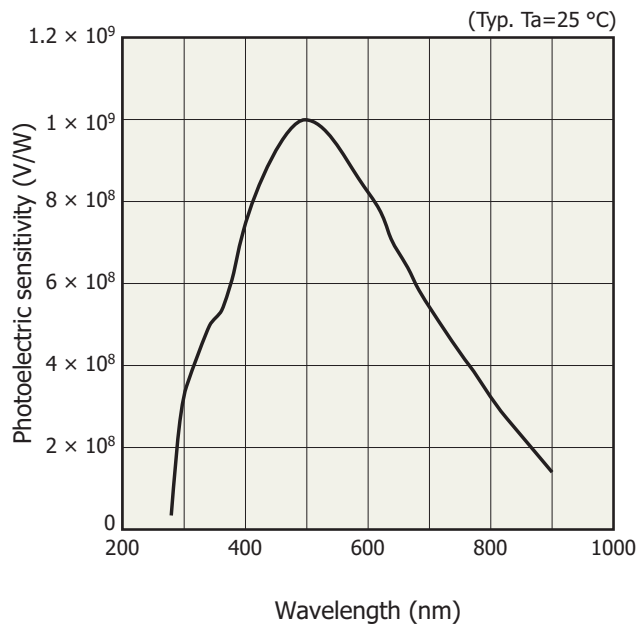


KACCB0389EA

Frequency response (typical example)

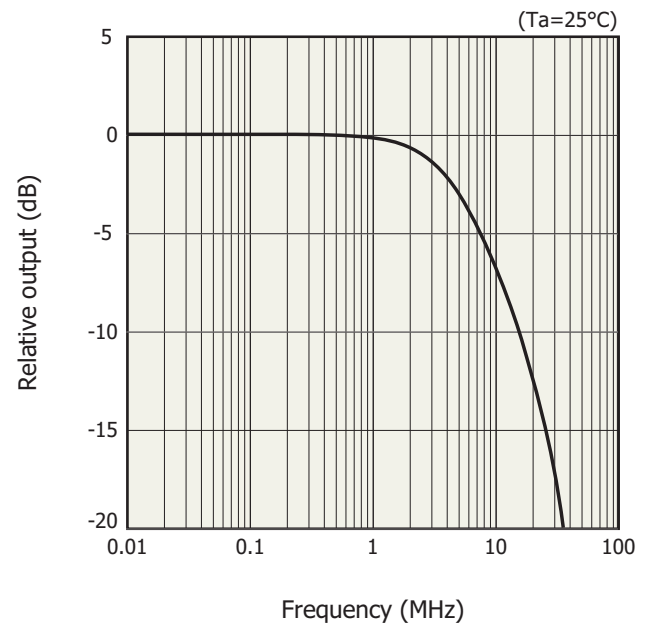


KACCB0390EA

Linearity

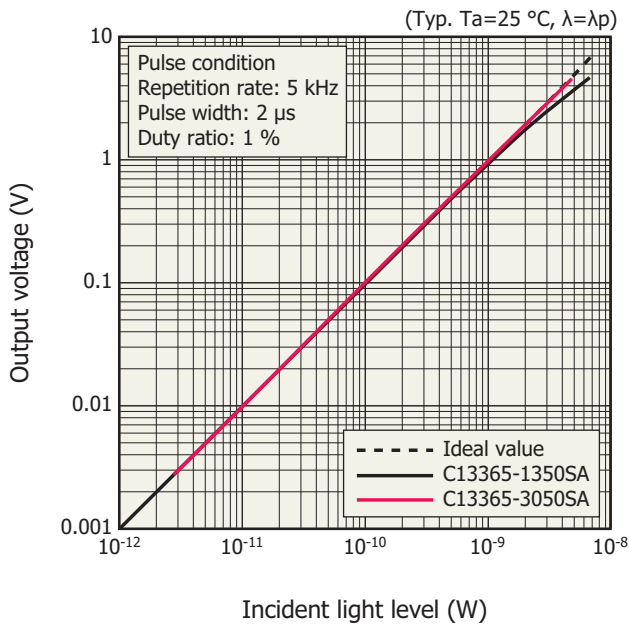


KACCB0395EA

Dimensional outlines (unit: mm)

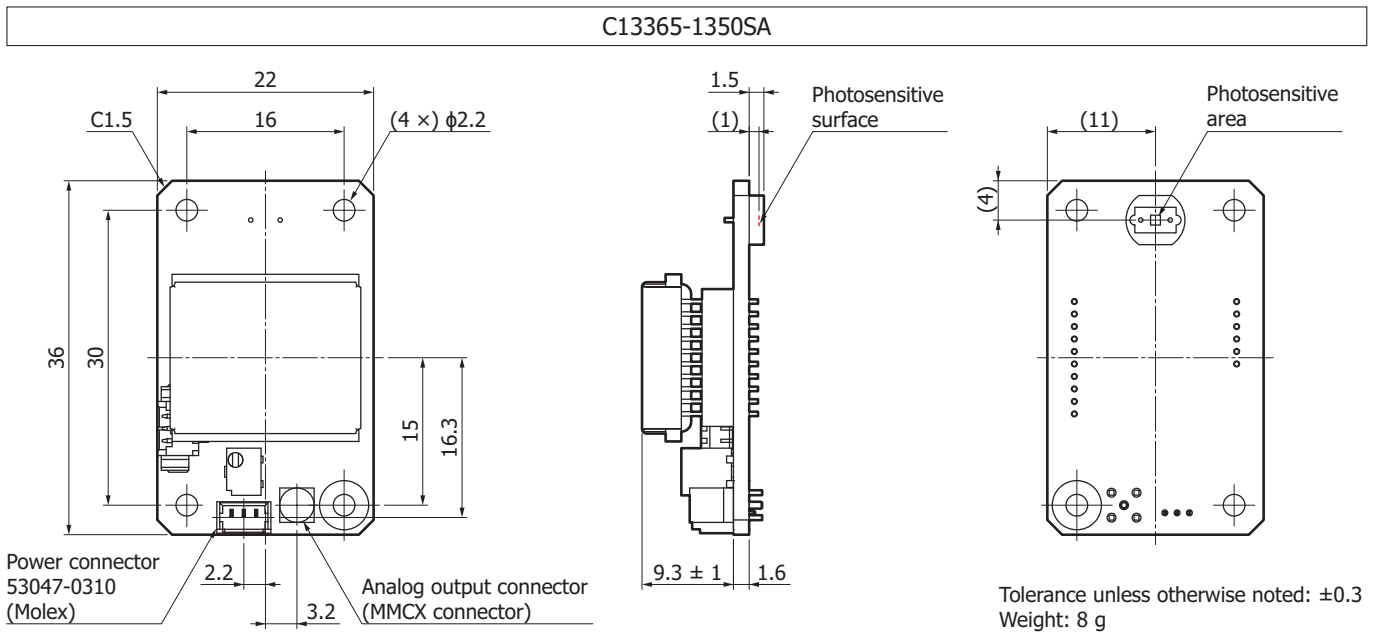

KACCA0353EB

C13365-3050SA

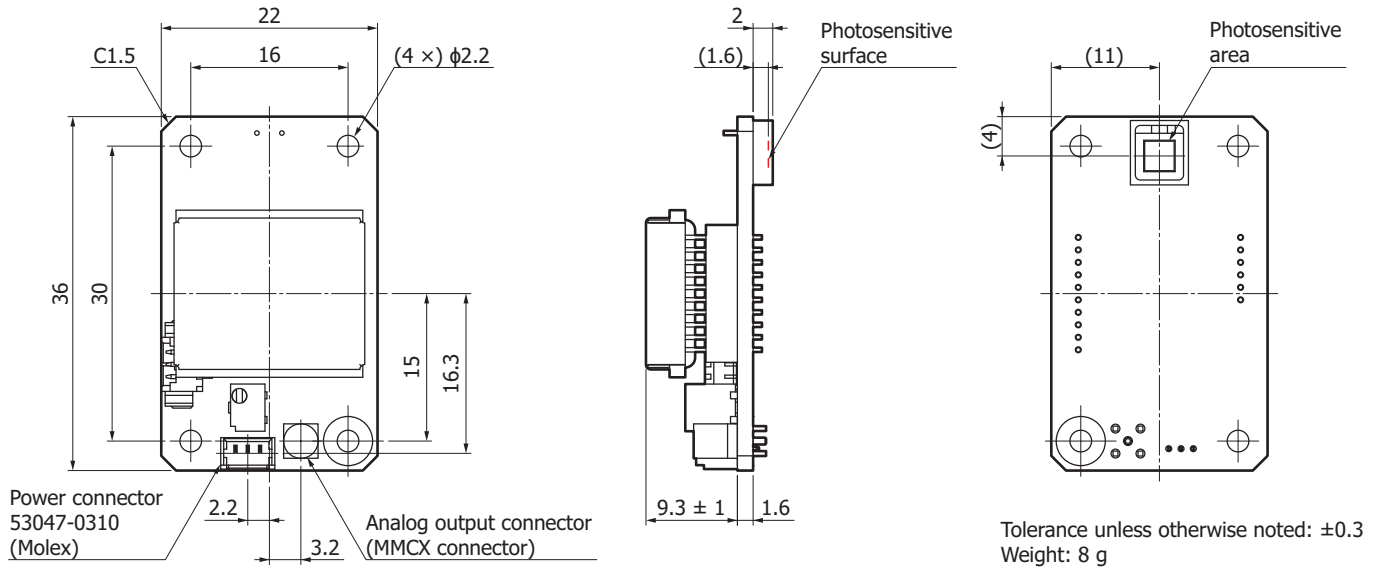

KACCA0354EB


Accessories

- Power cable
- Instruction manual

Options (sold separately)

MMCX-BNC cable A12763

Dimensional outline (unit: mm)

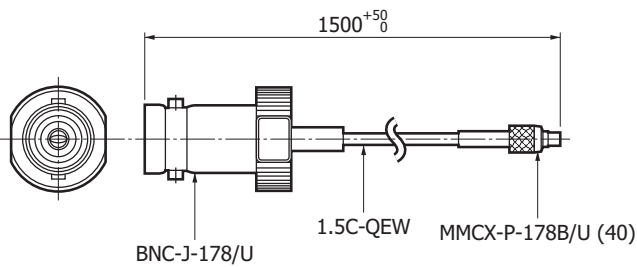

KACCA0358EA

Lineup of MPPC modules

| Type no. | Output | Effective photosensitive area (mm) | Pixel pitch (μm) | Cooling | | |
|---------------|---------|------------------------------------|-------------------------------|------------|-----------|-----------|
| C13365-1350SA | Analog | 1.3 × 1.3 | 50 | Non-cooled | | |
| C13365-3050SA | | 3 × 3 | | | | |
| C13366-1350GA | Analog | 1.3 × 1.3 | | 50 | TE-cooled | |
| C13366-3050GA | | 3 × 3 | | | | |
| C13366-1350GD | Digital | 1.3 × 1.3 | | | 50 | TE-cooled |
| C13366-3050GD | | 3 × 3 | | | | |

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

- Precautions
- Disclaimer

MPPC is a registered trademark of Hamamatsu Photonics K.K.

Information described in this material is current as of March 2020.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218, E-mail: usa@hamamatsu.com

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8, E-mail: info@hamamatsu.de

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10, E-mail: infos@hamamatsu.fr

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44)1707-294888, Fax: (44)1707-325777, E-mail: info@hamamatsu.co.uk

North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01, E-mail: info@hamamatsu.se

Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it

China: Hamamatsu Photonics (China) Co., Ltd.: B1201, Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R.China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866, E-mail: hpc@hamamatsu.com.cn

Taiwan: Hamamatsu Photonics Taiwan Co., Ltd.: 8F-3, No. 158, Section2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081, E-mail: info@hamamatsu.com.tw