



C13368-3050EA-16, C13369-3050EA-04

**MPPC array modules for very-low-level light detection,
16 ch analog output**

The C13368-3050EA-16 and C13369-3050EA-04 are optical measurement module with an MPPC array that can detect very-low-level light. These modules consist of a 16 ch MPPC array, an amplifier, and a high-voltage power supply circuit. The signal output type of these MPPC modules is 16 ch analog. You can simply connect an external power supply (± 5 V) to use this module.

Features

- Built-in MPPC array (1 × 16 ch or 4 × 4 ch)
- High sensitivity in the short wavelength range
- Low noise equivalent power
- Built-in temperature compensation function
- Analog output

Applications

- Evaluation of MPPC arrays
- Low-light-level measurement
- Non-destructive inspection
- Fluorescence measurement
- Analytical instruments

Structure

Parameter	C13368-3050EA-16	C13369-3050EA-04	Unit
Number of MPPC channels	16 (1 × 16)	16 (4 × 4)	ch
Photosensitive area/ch	3 × 3		mm
Pixel pitch	50		μm
Number of pixels/ch	3584		-
Number of output channels	16		ch
Output connector	MMCX		-

Absolute maximum ratings

Parameter	Symbol	Condition	Value	Unit
Supply voltage	Vs		±6	V
Operating temperature	Topr	No dew condensation*1	-20 to +60	°C
Storage temperature	Tstg	No dew condensation*1	-20 to +80	°C

*1: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Electrical and optical characteristics (Ta=25 °C, λ=λp, Vs=±5 V, unless otherwise noted)


Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit	
Spectral response range	λ		320 to 900			nm	
Peak sensitivity wavelength	λp		500			nm	
Output voltage stability depending on temperature	-	Ta=25 ± 10 °C	-	-	±10	%	
Photoelectric conversion sensitivity	-		0.7 × 10 ⁹	1 × 10 ⁹	1.3 × 10 ⁹	V/W	
Cutoff frequency	High band	fc	-3 dB, sine wave	3.5	5	-	MHz
	Low band			DC			-
Rise time	tr	10% to 90%, 1 p.e.	-	9	-	ns	
Noise equivalent power	NEP	Dark state	-	1.2	2	fW/Hz ^{1/2}	
Minimum detection limit	-	Dark state	-	2.7	4.5	pW rms	
Maximum output voltage	-		-	4.7	-	V	
Saturation input light level	-	Total of all channels	-	6	-	nW	
Output offset voltage	-		-	-	±30	mV	

Electrical characteristics

Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Supply voltage*2	+Vs		+4.75	+5	+5.25	V
	-Vs		-4.75	-5	-5.25	
Current consumption	Ic	+Vs	-	+250	+500	mA
		-Vs	-	-200	-500	

*2: A power supply with 1 A or higher output must be used.


Block diagram

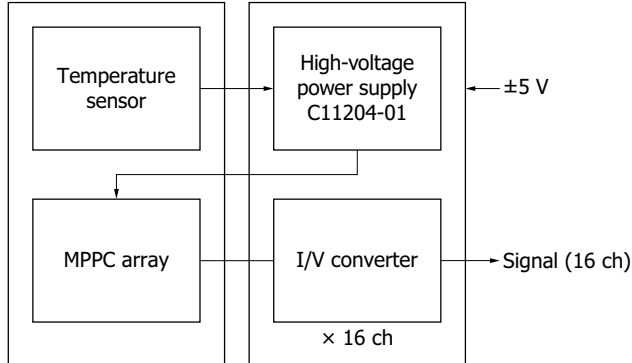

KACCC0824EA

Connection example

Using the supplied power cable, connect the MPPC module to a power supply. You can observe the MPPC module's output waveform by connecting the module to an oscilloscope.

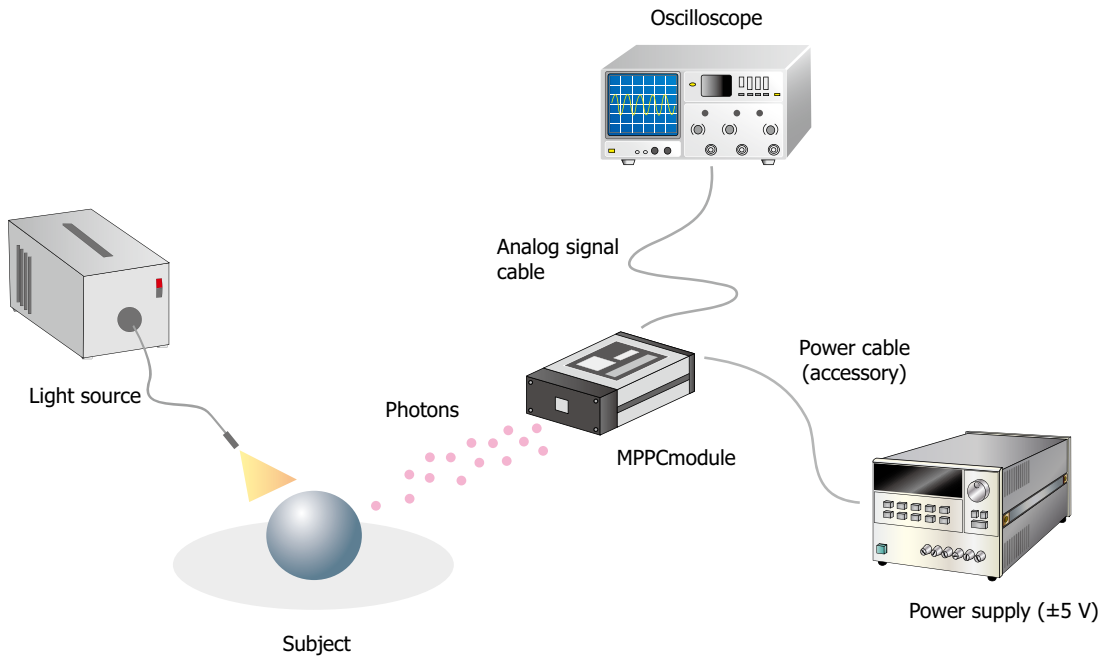


KACCC0876EA


Measurement example

Analogue output

(Incident light level: 200 pW, $\lambda = \lambda_p$)

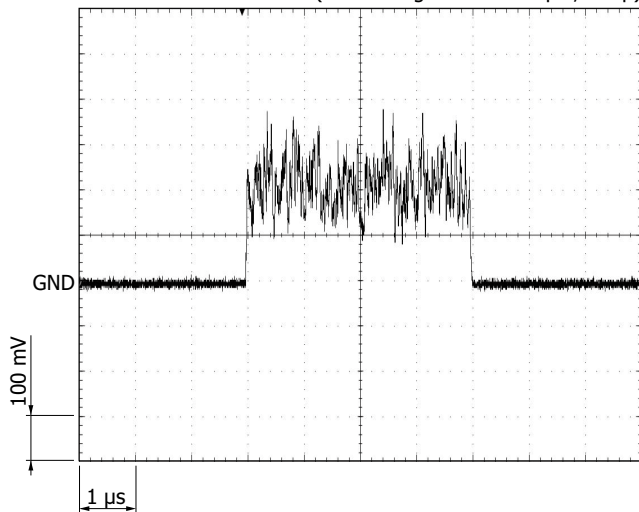


Photoelectric conversion sensitivity vs. wavelength

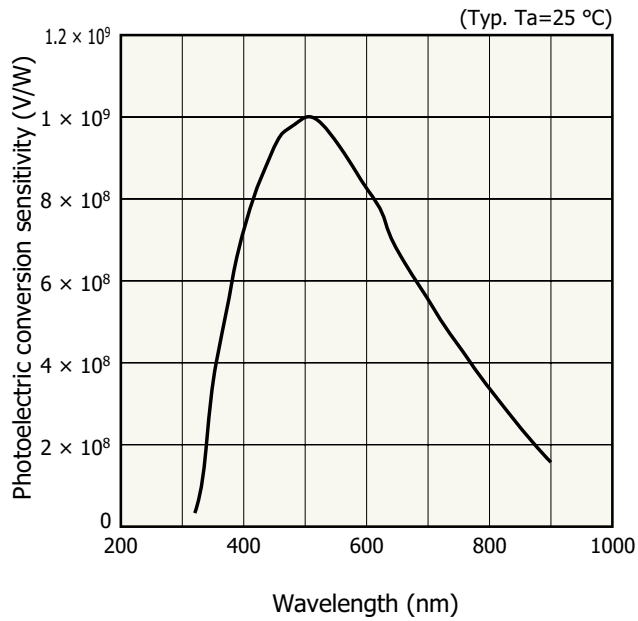

KACCB0466EB


Linearity

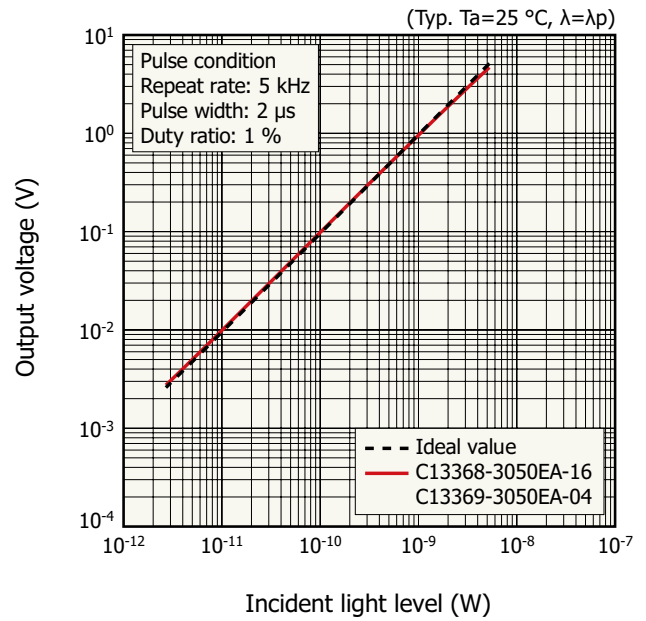

KACCB0467EB

Dimensional outline (unit: mm)


C13368-3050EA-16

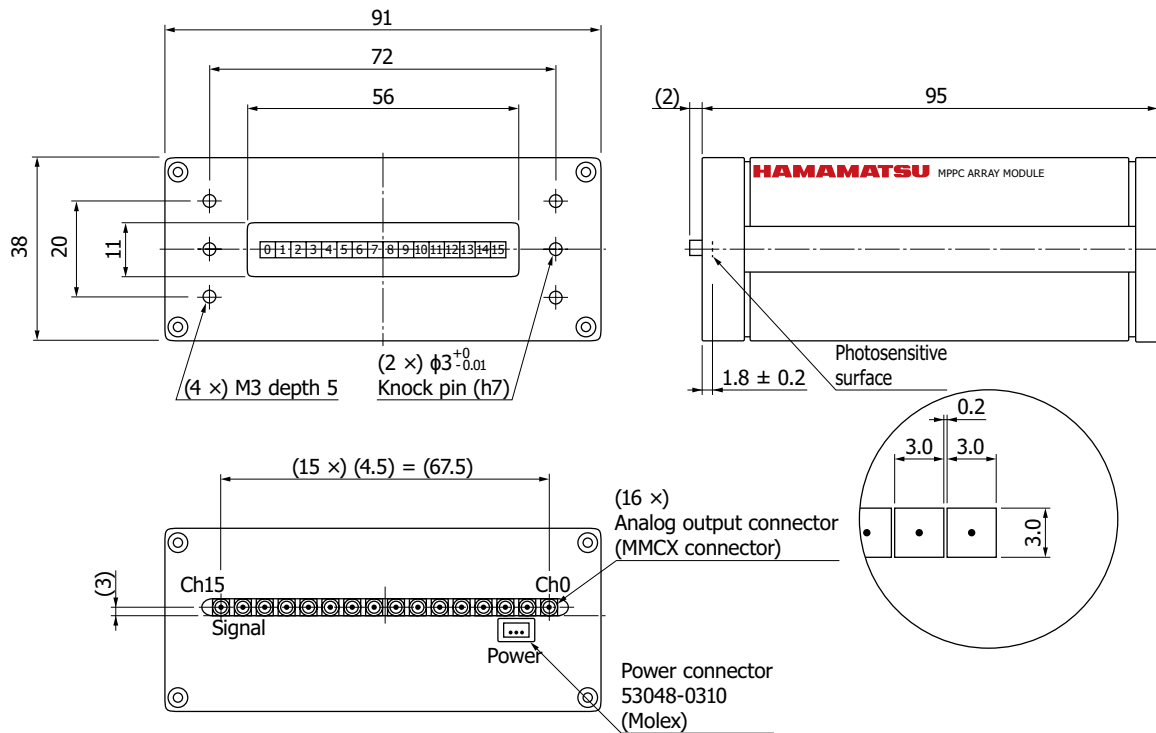

Tolerance unless otherwise noted: ± 0.5
Weight: 380 g

KACCA0400EB

C13369-3050EA-04

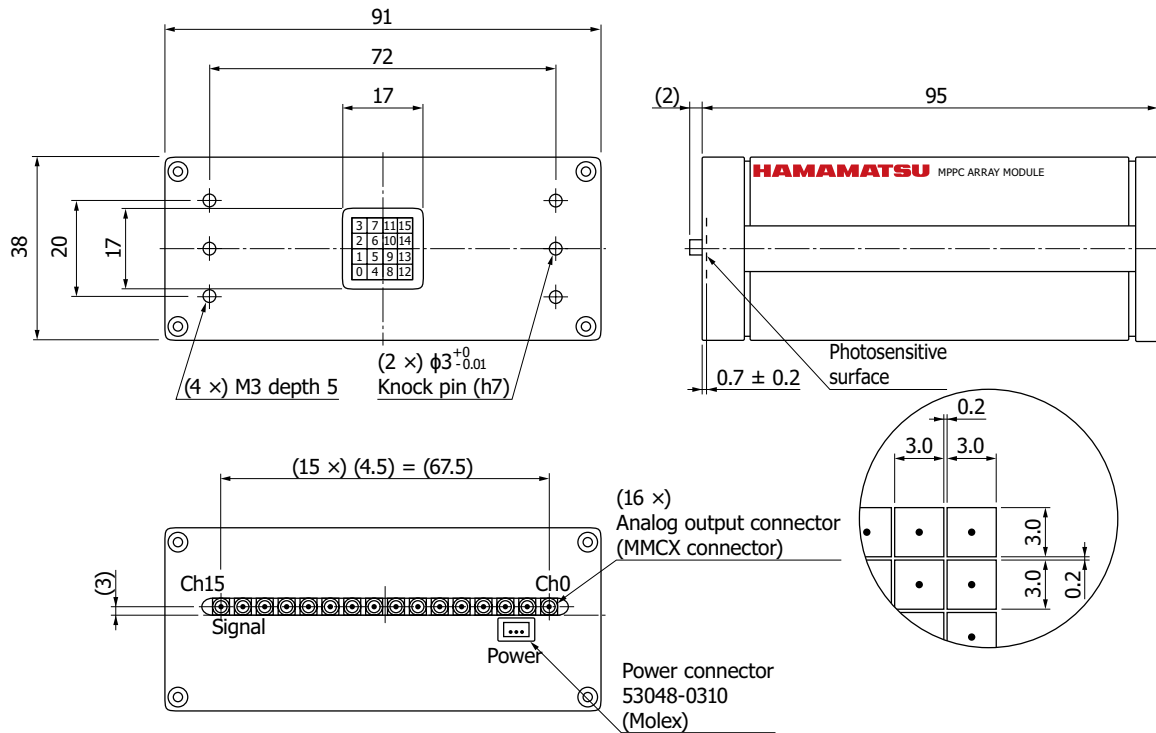

Tolerance unless otherwise noted: ± 0.5
 Weight: 380 g

KACCA0380EB


Accessories

- Power cable
- Instruction manual

Options (sold separately)

MMCX-BNC cable A12763

Dimensional outline (unit: mm)

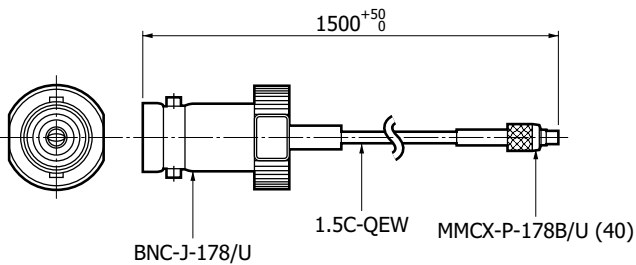

KACCA0358EA

Precautions

- Use the product by referring to the supplied instruction manual.

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

- Precautions
- Disclaimer

MPPC is a registered trademark of Hamamatsu Photonics K.K.
Information described in this material is current as of May 2022.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: HAMAMATSU CORPORATION: 360 Foothill Road, Bridgewater, NJ 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: usa@hamamatsu.com

Germany: HAMAMATSU PHOTONICS DEUTSCHLAND GMBH.: Arzbergerstr. 10, 82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8 E-mail: info@hamamatsu.de

France: HAMAMATSU PHOTONICS FRANCE S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: infos@hamamatsu.fr

United Kingdom: HAMAMATSU PHOTONICS UK LIMITED: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, UK, Telephone: (44)1707-294888, Fax: (44)1707-325777 E-mail: info@hamamatsu.co.uk

North Europe: HAMAMATSU PHOTONICS NORDEN AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01 E-mail: info@hamamatsu.se

Italy: HAMAMATSU PHOTONICS ITALIA S.R.L.: Strada della Moia, 1 int. 6, 20044 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41 E-mail: info@hamamatsu.it

China: HAMAMATSU PHOTONICS (CHINA) CO., LTD.: 1201 Tower B, Jiaming Center, 27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R. China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866 E-mail: hpc@hamamatsu.com.cn

Taiwan: HAMAMATSU PHOTONICS TAIWAN CO., LTD.: 8F-3, No.158, Section 2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081 E-mail: info@hamamatsu.com.tw