

C4159 series

Low noise amplifiers for infrared detector (InSb, InAs, InAsSb, InGaAs)

These are high gain and low noise amplifiers for Hamamatsu various infrared detectors. By connecting a detector and supplying the power, analog voltage output can be obtained and the signal can be easily observed with a voltmeter or the like. Amplifiers that match the characteristics of infrared detectors are available.

Features

- Voltage output for easy handling
- Conversion impedance: 3 ranges switchable (C4159 series)
- Compact: business card size

Accessories

- Instruction manual
- Power cable A4372-02 (one end with 4-pin connector for connection to amplifier and the other end unterminated, 2 m)

Applications

- Spectrophotometers
- Radiation thermometers
- Laser power monitor

Required power supply specifications

- Output voltage: $\pm 15 \text{ V} \pm 0.5$
 - Current capacity: 1.5 times or more of amplifier's maximum current consumption
 - Ripple noise: 5 mVp-p or less
 - Analog power supply only
- Recommended DC power supply: PW18-3AD (TEXIO)
E3630A (Keysight Technologies)

Applicable detectors

Type	Type no.	Applicable detectors*1 *2 *3
Amplifier for photovoltaic detectors	C4159-01	Dewar type InSb (P5968-060/-100), Non-cooled type InAsSb (P13243-011MA/-013CA/ -015CF/-016CF/-033CF/-033MF/-039CF/-039MF/-043CF/-043MF, P13894-011CN/ -011MA/-011NA), TE-cooled type InAsSb (P13243-122MS/-222MS, P13894-211MA), Dewar type TypeII(P15409-901)
	C4159-04	Dewar type InSb (P5968-200)
	C4159-05	Dewar type InAs (P7163)
	C4159-06	TE-cooled type InAs (P10090-11/-21)
	C4159-07	Non-cooled type InAs (P10090-01), TE-cooled type InAsSb (P11120-201, P12691-201G)
Amplifier for InGaAs PIN photodiodes	C4159-03	Non/TE-cooled type InGaAs (G12180/G12181/G12182/G12183 series)

*1: These amplifiers cannot operate multiple detectors.

*2: Consult us before purchasing if you want to use with a detector other than listed here.

*3: Consult us before purchasing if you want to use with a multi-element detector.

Absolute maximum ratings (Ta=25 °C)

Parameter	Value	Unit
Supply voltage	18.0 max.	V
Operating temperature*4	0 to +40	°C
Storage temperature*4	-20 to +70	°C

*4: No dew condensation

When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Amplifiers for photovoltaic detectors (Typ.)

Parameter	C4159-01	C4159-04	C4159-05	C4159-06	C4159-07	Unit
Conversion impedance	$10^8, 10^7, 10^6$ (3 ranges switchable)	$2 \times 10^7, 2 \times 10^6, 2 \times 10^5$ (3 ranges switchable)	$10^8, 10^7, 10^6$ (3 ranges switchable)	$10^6, 10^5, 10^4$ (3 ranges switchable)	$10^6, 10^5, 10^4$ (3 ranges switchable)	V/A
Frequency response (amplifier only, -3 dB)	DC to 100 kHz*5	DC to 45 kHz	DC to 15 kHz	DC to 100 kHz	DC to 100 kHz	-
Output impedance	50	50	50	50	50	Ω
Maximum output voltage (1 k Ω load)	+10	+10	+10	+10	+10	V
Output offset voltage	± 5	± 5	± 10	± 5	± 5	mV
Equivalent input noise current*6 (f=1 kHz)	0.15 ($10^8, 10^7$ range) 0.65 (10^6 range)	0.55	0.15 ($10^8, 10^7$ range) 0.65 (10^6 range)	6	10	pA/Hz ^{1/2}
Reverse voltage	Limited to 0 V operation. Cannot be applied from external unit.					-
External power supply*7	± 15					V
Current consumption	+30, -10 max.		+30, -22 max.			mA

*5: When connected to a detector, frequency response becomes 60 kHz or less ($\phi 0.6$ mm: 60 kHz or less, $\phi 1$ mm: 25 kHz or less). Ringing occurs in the output if the rise time t_r (10 to 90%) of incident light is approximately 100 μ s or less. The ringing becomes larger as the rise time becomes shorter. However, ringing does not occur for sine wave light. (For information on the ringing specifications, see the figure below.)

*6: Input resistance: 1 M Ω (C4159-01/-04/-05), 500 Ω (C4159-06/-07)

*7: Recommended DC power supply (analog power supply): ± 15 V


Current capacity: 1.5 times the maximum current consumption or more

Ripple noise: 5 mVp-p or less

Note: Output noise voltage = Equivalent input noise current \times Conversion impedance

For information about accessories except for the amplifiers, refer to the datasheet "Accessories for infrared detector".

Ringings specifications

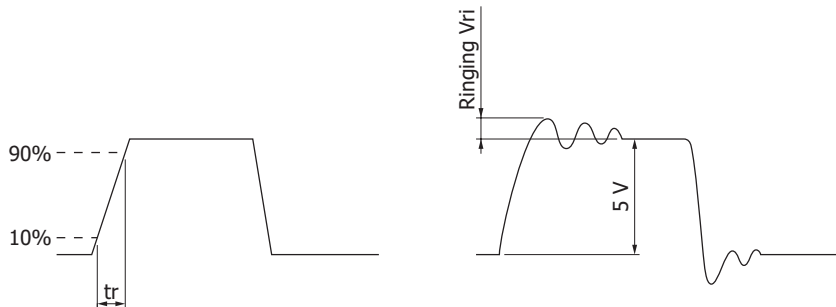

Incident light

Output waveform when $t_r=40 \mu$ s and photosensitive area is $\phi 0.6$ mm
 Ringing $V_{ri} \leq 1.5$ V
 Oscillating cycle ≤ 3 cycles

KIRDA0090EA

Amplifier for InGaAs PIN photodiodes (Typ.)

Parameter	C4159-03	Unit
Conversion impedance	$10^7, 10^6, 10^5$ (3 ranges switchable)	V/A
Frequency response (amp only, -3 dB)	DC to 15 kHz	-
Output impedance	50	Ω
Maximum output voltage (1 k Ω load)	+10	V
Output offset voltage	± 5	mV
Equivalent input noise current (f=1 kHz)	2.5	pA/Hz ^{1/2}
Reverse voltage	Can be applied from external unit.	
External power supply*8	± 15	
Current consumption	± 15 max.	


*8: Recommended DC power supply (analog power supply): ± 15 V

Current capacity: More than 1.5 times the maximum current consumption

Ripple noise: 5 mVp-p or less

Dimensional outlines (unit: mm)

C4159-01/-03/-04/-05/-06/-07

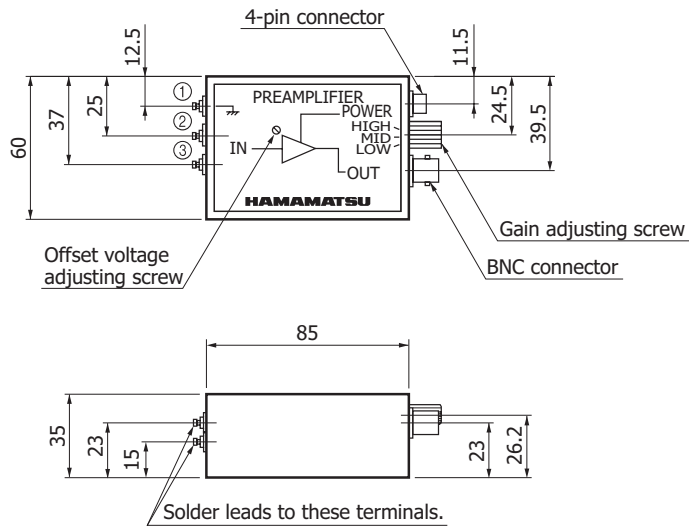

PIN connections



- ① GND
- ② Cathode
- ③ Anode

Type no.	Weight
C4159-01/-03/-04/-05	320 g
C4159-06/-07	330 g

Tolerance unless otherwise noted: ± 1
 Note: Socket for lead attachment is not provided.

KIRDA0046EC

A4372-02

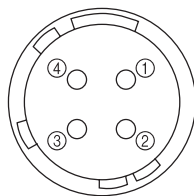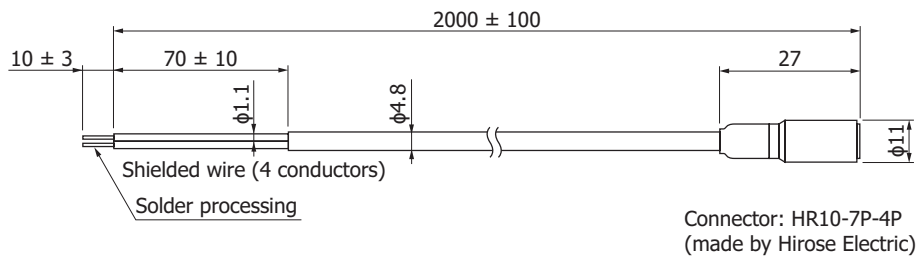

Pin no.	Pin connection	Lead color
①	-Vs	Blue
②	GND	Black/white/blue stranded wire
③	GND	
④	+Vs	White

Tolerance unless otherwise noted: ± 1

As viewed from connector side

KIRDA0196EB

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

■ Precautions

- Disclaimer
- Safety consideration
- Compound opto-semiconductors (photosensors, light emitters)

■ Technical information

- Compound semiconductor photosensors / Technical note

Information described in this material is current as of February 2022.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: HAMAMATSU CORPORATION: 360 Foothill Road, Bridgewater, NJ 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: usa@hamamatsu.com

Germany: HAMAMATSU PHOTONICS DEUTSCHLAND GMBH.: Arzbergerstr. 10, 82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8 E-mail: info@hamamatsu.de

France: HAMAMATSU PHOTONICS FRANCE S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: infos@hamamatsu.fr

United Kingdom: HAMAMATSU PHOTONICS UK LIMITED: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, UK, Telephone: (44)1707-294888, Fax: (44)1707-325777 E-mail: info@hamamatsu.co.uk

North Europe: HAMAMATSU PHOTONICS NORDEN AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01 E-mail: info@hamamatsu.se

Italy: HAMAMATSU PHOTONICS ITALIA S.R.L.: Strada della Moia, 1 int. 6, 20044 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41 E-mail: info@hamamatsu.it

China: HAMAMATSU PHOTONICS (CHINA) CO., LTD.: 1201 Tower B, Jiaming Center, 27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R. China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866 E-mail: hpc@hamamatsu.com.cn

Taiwan: HAMAMATSU PHOTONICS TAIWAN CO., LTD.: 8F-3, No.158, Section 2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081 E-mail: info@hamamatsu.com.tw