

S14160-1310PS/-1315PS/-3010PS/-3015PS

**Low breakdown voltage, wide dynamic range type MPPC with small pixels**

The S14160 series is a small-pixel MPPC that features wide dynamic range. Even with an extremely narrow pixel pitch of 10 or 15  $\mu\text{m}$ , it features high fill factor, reduced crosstalk, and dark count.

**Features**

- Small pixel pitch (10  $\mu\text{m}$ , 15  $\mu\text{m}$ )
- High fill factor
- Wide dynamic range
- Low voltage operation ( $V_{BR}=38\text{ V typ.}$ )
- Low crosstalk and afterpulses
- High gain:  $10^5$  order

**Applications**

- High energy physics experiments
- Fluorescence measurement
- Flow cytometry
- DNA sequencers
- Environmental analysis

**Structure**

Parameter	Symbol	S14160				Unit
		-1310PS	-3010PS	-1315PS	-3015PS	
Effective photosensitive area	-	1.3 × 1.3	3 × 3	1.3 × 1.3	3 × 3	mm
Pixel pitch	-	10		15		$\mu\text{m}$
Number of pixels	-	16663	89984	7284	39984	-
Geometrical fill factor	-	31		49		%
Package	-	Surface mount type				-
Window	-	Silicone resin				-
Window refractive index	-	1.57				-

**Absolute maximum ratings (Ta=25 °C)**

Parameter	Symbol	Condition	Value	Unit
Reverse voltage	VR max	-	48	V
Operating temperature	Topr	No dew condensation*1	-40 to +60	°C
Storage temperature	Topr	No dew condensation*1	-40 to +85	°C
Soldering temperature	Tsol		240*2 (3 times)	°C

\*1: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

\*2: Reflow temperature, JEDEC J-STD-020 MSL 2a, see P.9

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

### Electrical and optical characteristics (Typ. Ta=25 °C, VR=Vop, unless otherwise noted)


Parameter	Symbol	S14160				Unit
		-1310PS	-3010PS	-1315PS	-3015PS	
Spectral response range	$\lambda$	290 to 900				nm
Peak sensitivity wavelength	$\lambda_p$	460				nm
Photon detection efficiency at $\lambda_p^{*3}$	PDE	18		32		%
Breakdown voltage <sup>*4</sup>	VBR	38±3				V
Recommended operating voltage <sup>*4</sup>	Vop	VBR + 5		VBR + 4		V
Vop variation within a reel	-	±0.1				V
Dark count rate <sup>*5</sup>	typ.	120	700	120	700	kcps
	max.	360	2100	360	2100	
Direct crosstalk probability	Pct	< 1				%
Terminal capacitance at Vop	Ct	100	530	100	530	pF
Gain	M	$1.8 \times 10^5$		$3.6 \times 10^5$		-
Temperature coefficient of Vop	$\Delta T V_{op}$	34				mV/°C

\*3: Photon detection efficiency does not include crosstalk and afterpulses.

\*4: Refer to the data attached for each product.

\*5: Threshold=0.5 p.e.


### Photon detection efficiency vs. wavelength

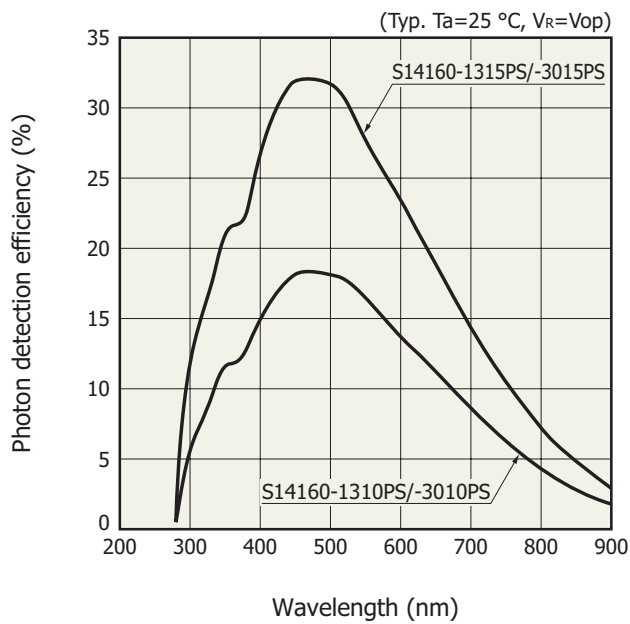


KAPDB0455EA

**Gain, crosstalk probability, photon detection efficiency vs. over voltage**

S14160-1310PS/-3010PS

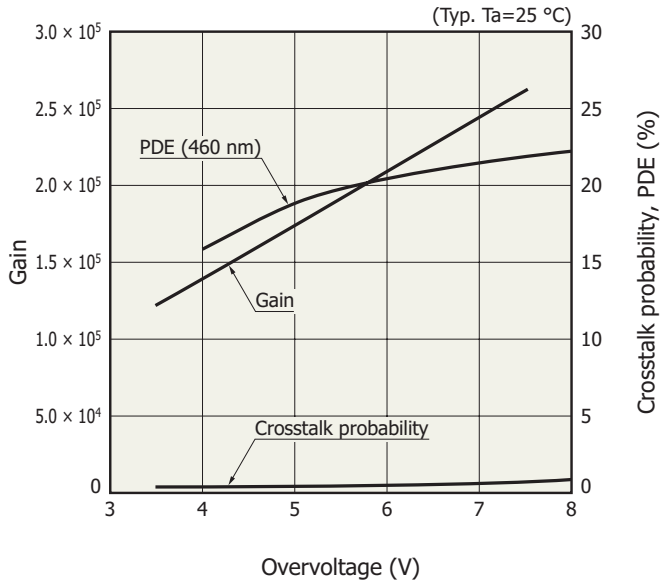


S14160-1315PS/-3015PS

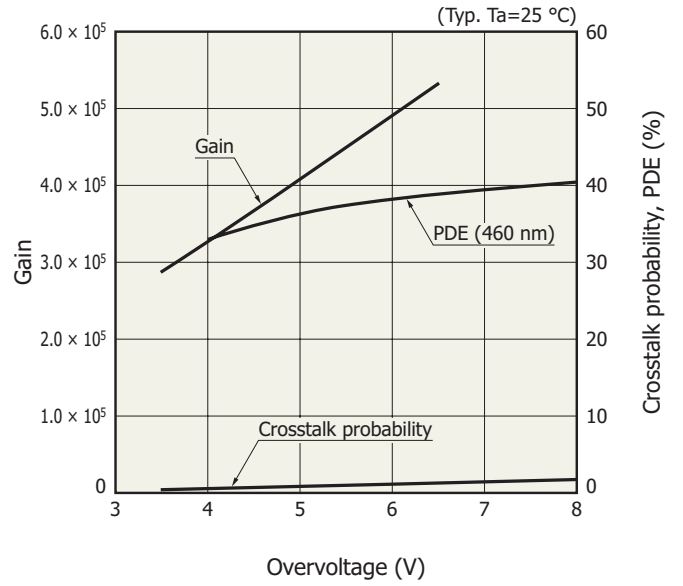


**Linearity**

S14160-1310PS/-3010PS

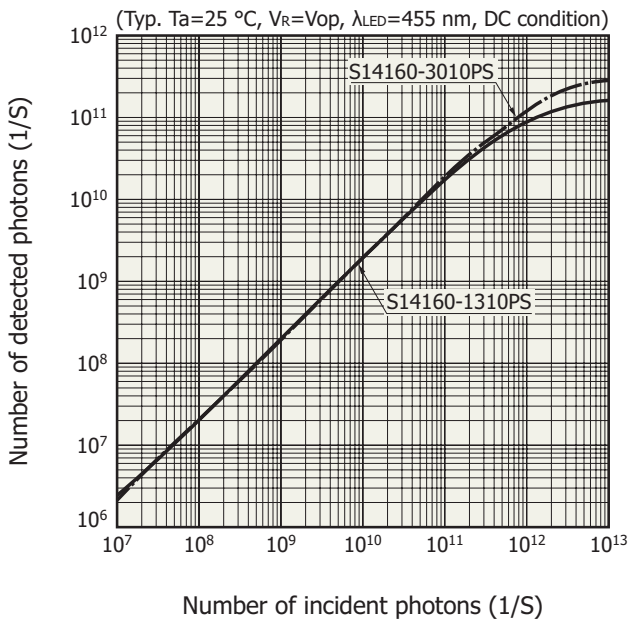


S14160-1315PS/-3015PS

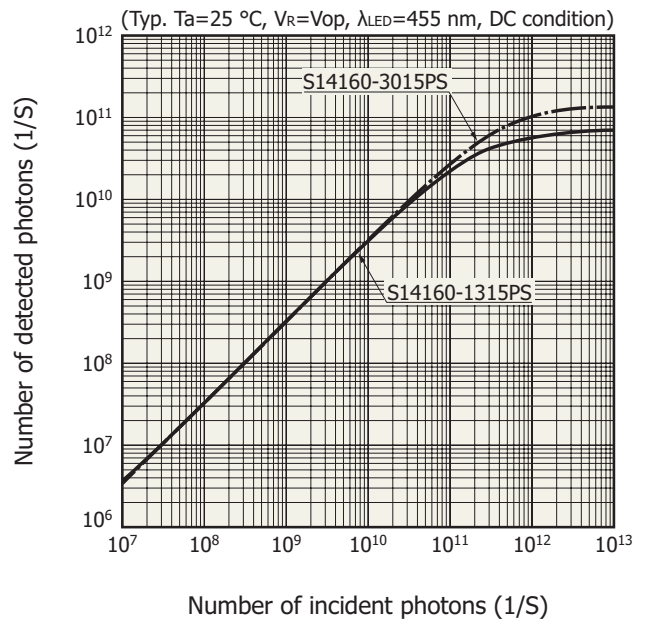


1 photon equivalent pulse output


S14160-1310PS

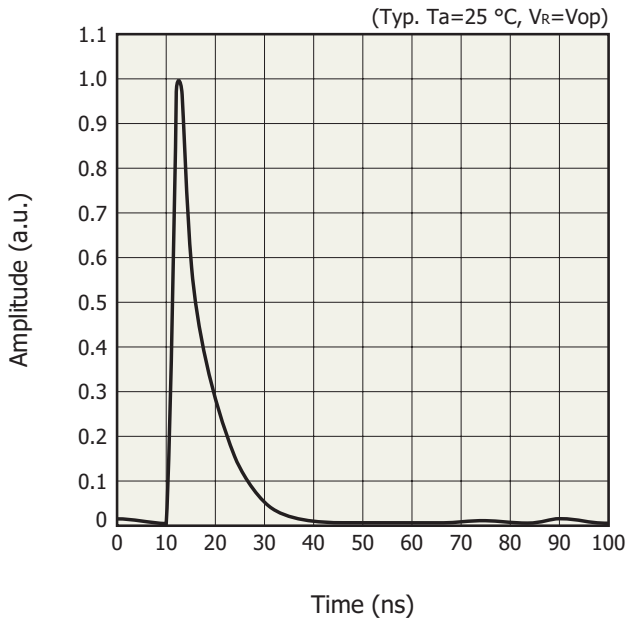


S14160-1315PS

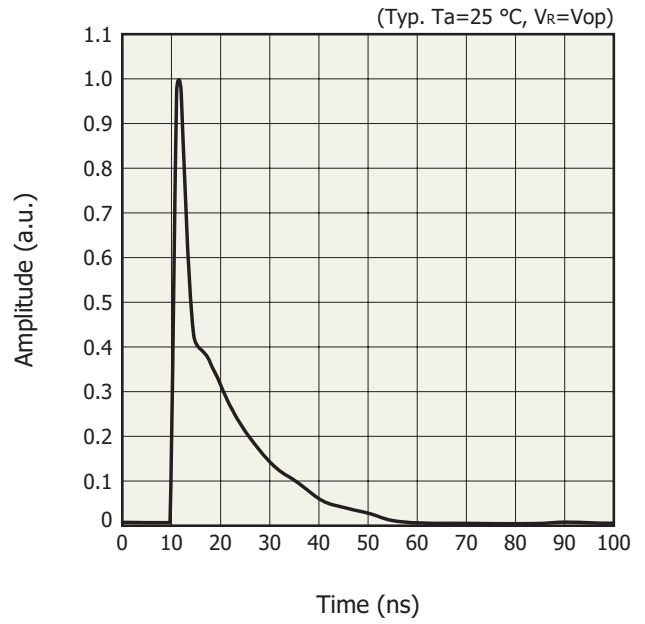


S14160-3010PS

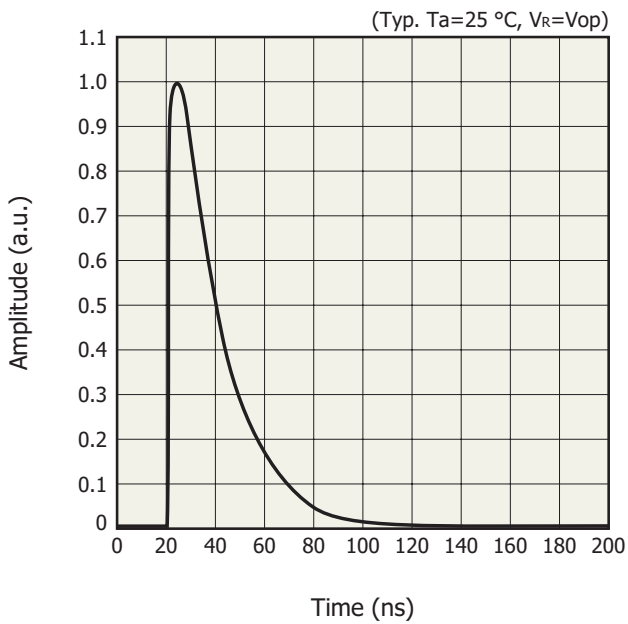

S14160-3015PS

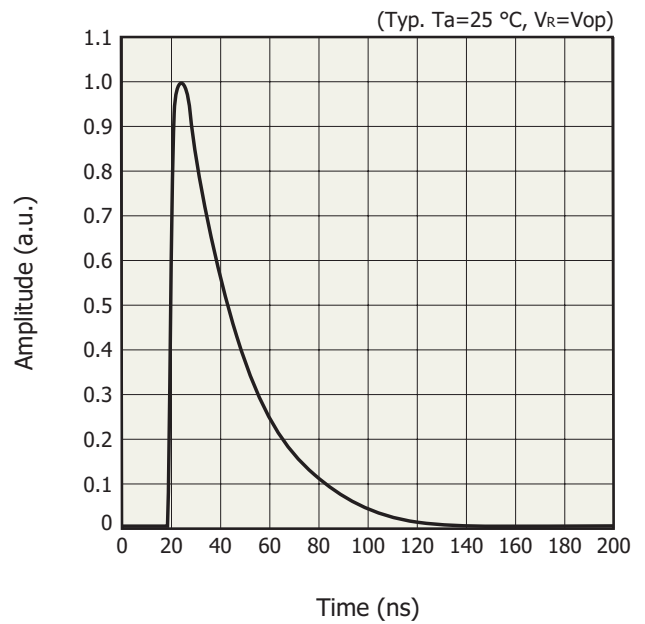



Waveform measurement setup

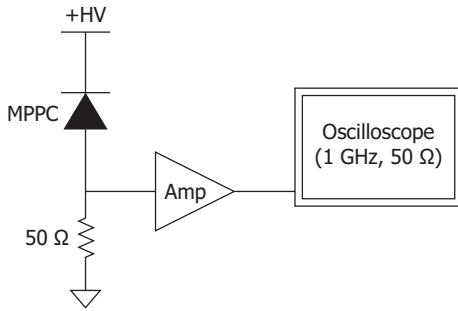

KAPDC0115EA

Dimensional outlines (unit: mm)

S14160-1310PS/-1315PS

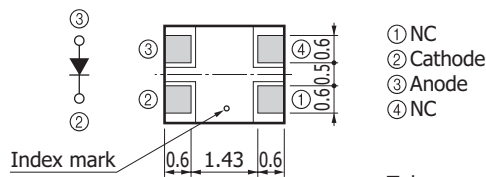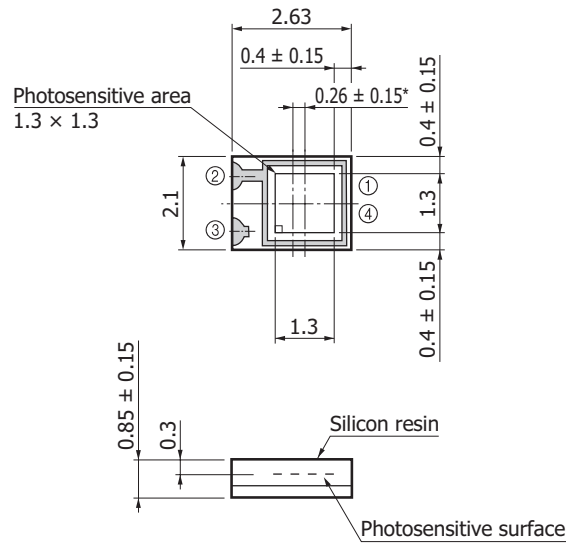


- ① NC
- ② Cathode
- ③ Anode
- ④ NC

Tolerance unless otherwise noted: ±0.1  
 \* Distance from chip center to package center

KAPDA0205EA

S14160-3010PS/-3015PS

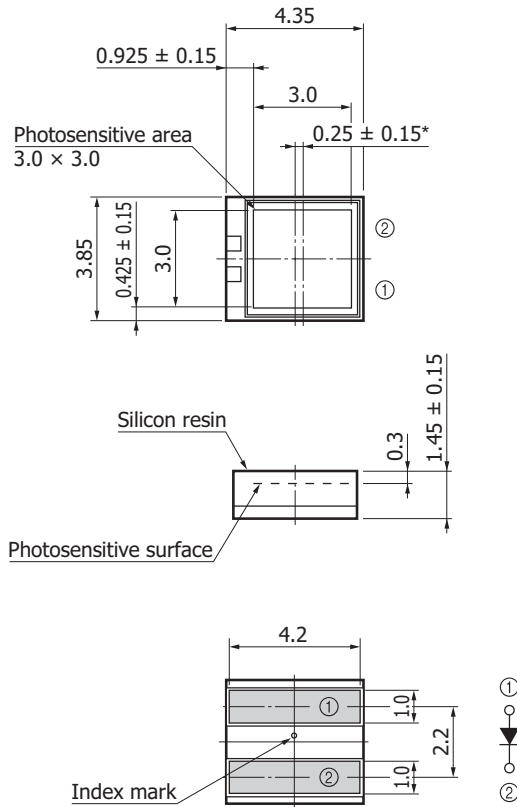


Tolerance unless otherwise noted:  $\pm 0.1$   
 \* Distance from chip center to package center

KAPDA0206EA


Recommended land patten (unit: mm)

S14160-1310PS/-1315PS

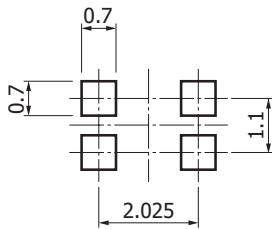

KAPDC0116EA

S14160-3010PS/-3015PS

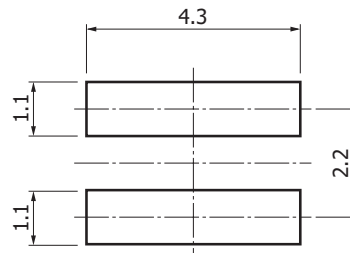

KAPDC0117EA


Standard packing specifications

S14160-1310PS/-1315PS

Reel (conforms to JEITA ET-7200)

Reel diameter	Hub diameter	Tape width	Material	Electrostatic characteristics
180 mm	60 mm	8 mm	PS	Conductive

Embossed tape (unit: mm, material: PS, conductive)

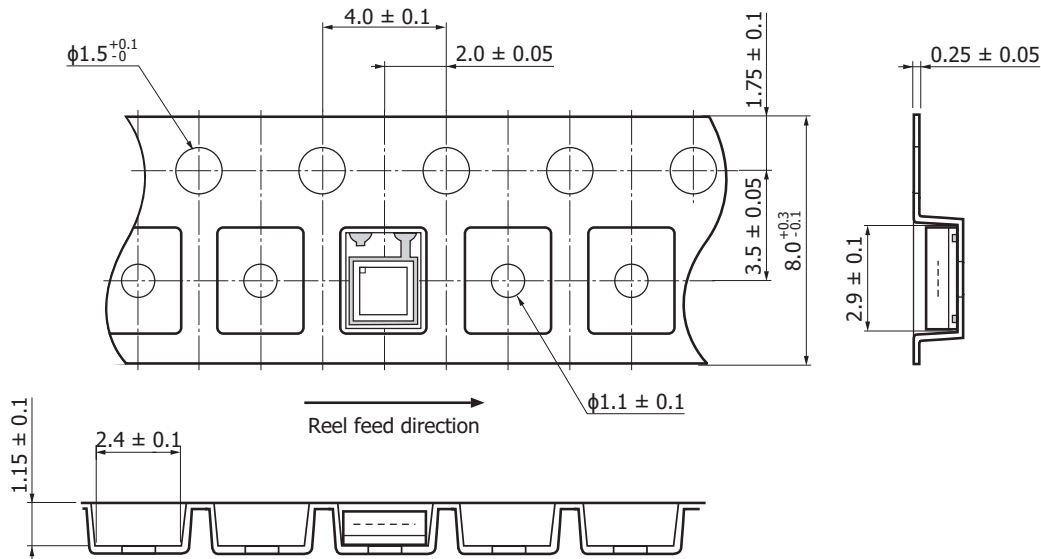

KAPDC0101EA

Packing quantity

300 pcs/reel

Packing type

Reel and desiccant in moisture-proof packaging (vacuum-sealed)

Label


Type No. _____
Lot No. _____
Vop _____
HAMAMATSU
MADE IN JAPAN

S14160-3010PS/-3015PS

■ Reel (conforms to JEITA ET-7200)

Reel diameter	Hub diameter	Tape width	Material	Electrostatic characteristics
254 mm	80 mm	12 mm	PS	Conductive

■ Embossed tape (unit: mm, material: PS, conductive)

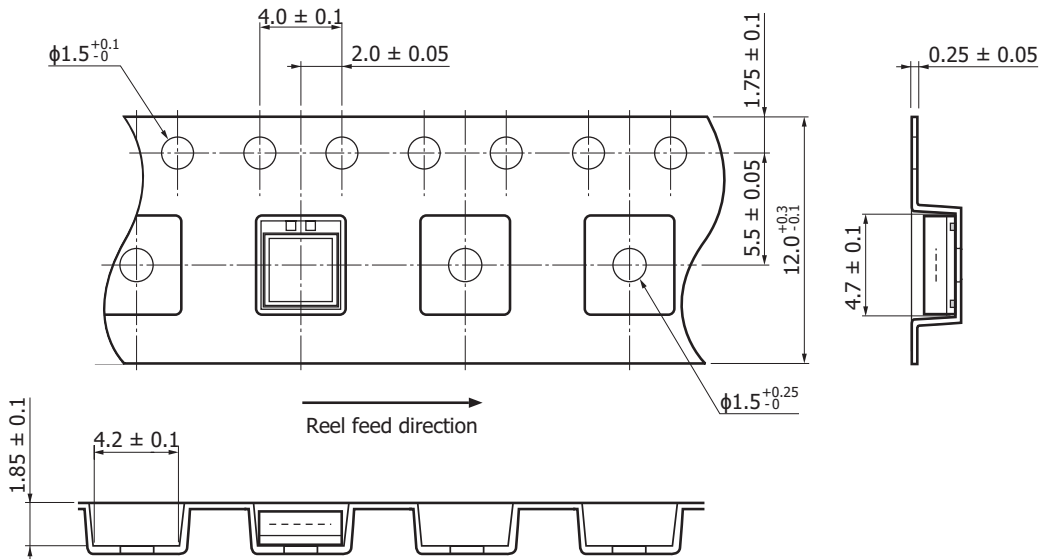

KAPDC0118EA

■ Packing quantity

300 pcs/reel

■ Packing type


Reel and desiccant in moisture-proof packaging (vacuum-sealed)

■ Label

Type No. _____
Lot No. _____
Vop _____
HAMAMATSU
MADE IN JAPAN



## Recommended reflow soldering conditions

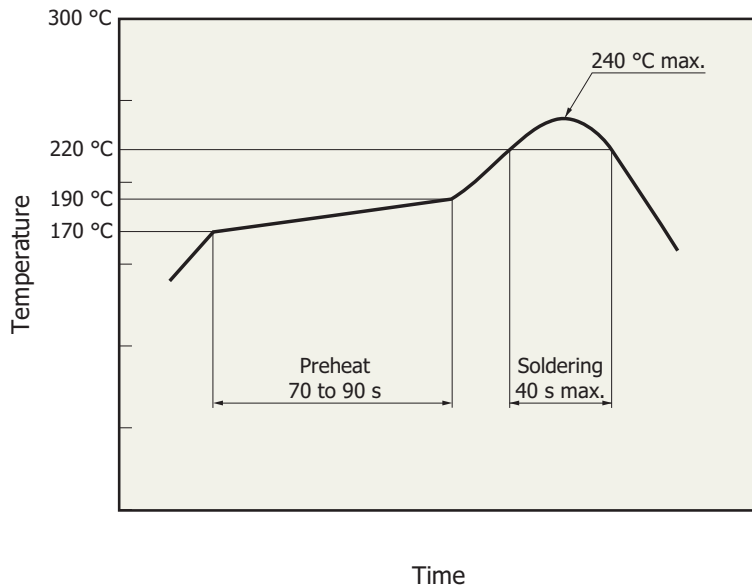

KPIC80171EA

- This surface mount type product supports lead-free soldering. After unpacking, store it in an environment at a temperature of 30 °C or less and a humidity of 60% or less, and perform soldering within 4 weeks.
- This effect that the product receives during reflow soldering varies depending on the circuit board and reflow oven that are used. When you set reflow soldering conditions, check that problems do not occur in the product by testing out the conditions in advance.

## Precautions

- If necessary, incorporate appropriate protective circuits in power supplies, devices, and measuring instruments to prevent overvoltage and overcurrent.

## Related information

[www.hamamatsu.com/sp/ssd/doc\\_en.html](http://www.hamamatsu.com/sp/ssd/doc_en.html)

### ■ Precautions

- Disclaimer
- Surface mount type products

MPPC is a registered trademark of Hamamatsu Photonics K.K.  
Information described in this material is current as of April 2022.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

# HAMAMATSU

[www.hamamatsu.com](http://www.hamamatsu.com)

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: HAMAMATSU CORPORATION: 360 Foothill Road, Bridgewater, NJ 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: [usa@hamamatsu.com](mailto:usa@hamamatsu.com)

Germany: HAMAMATSU PHOTONICS DEUTSCHLAND GMBH.: Arzbergerstr. 10, 82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8 E-mail: [info@hamamatsu.de](mailto:info@hamamatsu.de)

France: HAMAMATSU PHOTONICS FRANCE S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: [infos@hamamatsu.fr](mailto:infos@hamamatsu.fr)

United Kingdom: HAMAMATSU PHOTONICS UK LIMITED: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, UK, Telephone: (44)1707-294888, Fax: (44)1707-325777 E-mail: [info@hamamatsu.co.uk](mailto:info@hamamatsu.co.uk)

North Europe: HAMAMATSU PHOTONICS NORDEN AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01 E-mail: [info@hamamatsu.se](mailto:info@hamamatsu.se)

Italy: HAMAMATSU PHOTONICS ITALIA S.R.L.: Strada della Moia, 1 int. 6, 20044 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41 E-mail: [info@hamamatsu.it](mailto:info@hamamatsu.it)

China: HAMAMATSU PHOTONICS (CHINA) CO., LTD.: 1201 Tower B, Jianning Center, 27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R. China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866 E-mail: [hpc@hamamatsu.com.cn](mailto:hpc@hamamatsu.com.cn)

Taiwan: HAMAMATSU PHOTONICS TAIWAN CO., LTD.: 8F-3, No.158, Section 2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081 E-mail: [info@hamamatsu.com.tw](mailto:info@hamamatsu.com.tw)