


# InGaAs PIN photodiode

G14942 series

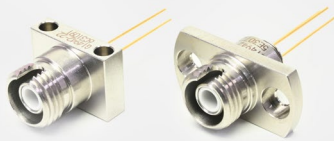

## Angled PC compatible, receptacle type

This is a receptacle type compatible with FC/Angled PC, and has a built-in high-speed InGaAs PIN photodiode.

### Features

- High-speed response: 2 GHz typ.
- Low dark current: 20 pA typ.
- FC/Angled PC compatible

### Applications

- Optical measurement including LiDAR
- Optical fiber communications
- Communication in industrial and semiconductor manufacturing equipment
- SS-OCT
- Laser power monitor

### Lineup

Parameter	G14942-22 <b>NEW</b>	G14942-32
Mounted type	Board	Panel
Connector		FC

### Absolute maximum ratings

Parameter	Symbol	Condition	Value	Unit
Reverse voltage	$V_R$ max	$T_a=25\text{ }^\circ\text{C}$	20	V
Operating temperature	$T_{opr}$	No dew condensation*1	-20 to +70	$^\circ\text{C}$
Storage temperature	$T_{stg}$	No dew condensation*1	-40 to +85	$^\circ\text{C}$

\*1: When there is a temperature difference between a product and the surrounding area in high humidity environments, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

### Electrical and optical characteristics ( $T_a=25\text{ }^\circ\text{C}$ , unless otherwise noted)

Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Spectral response range	$\lambda$			0.9 to 1.7		$\mu\text{m}$
Peak sensitivity wavelength	$\lambda_p$		-	1.55	-	$\mu\text{m}$
Photosensitivity*2	$S$	$\lambda=\lambda_p, V_R=5\text{ V}$	0.8	0.95	-	A/W
Dark current	$I_D$	Dark state, $V_R=5\text{ V}$	-	0.02	0.4	nA
Cutoff frequency	$f_c$	$V_R=5\text{ V}, R_L=50\text{ }\Omega$ $\lambda=\lambda_p, -3\text{ dB}$	-	2	-	GHz
Terminal capacitance	$C_t$	$V_R=5\text{ V}, f=1\text{ MHz}$ Case: GND	-	1	1.5	pF
Optical return loss*2	ORL	$\lambda=1.31/1.55\text{ }\mu\text{m}$	27	35	-	dB

\*2: Using a single-mode optical fiber with an FC/Angled PC type master plug

The G14942 series may be damaged or deteriorated by static electricity. Use caution when handling.



### Pin connections

Pin no.	Connection
①	Case*3
②	Anode
③	Cathode

\*3: It is not connected to the housing.

### Recommended soldering conditions

Soldering temperature: 260 °C (within 10 seconds)

Note: When you set soldering conditions, check that problems do not occur in the product by testing out the conditions in advance.

### Related information

[www.hamamatsu.com/sp/ssd/doc\\_en.html](http://www.hamamatsu.com/sp/ssd/doc_en.html)

#### ■ Precautions

- Disclaimer
- Safety consideration
- Metal, ceramic, plastic package products
- Compound opto-semiconductors (photosensors, light emitters)

#### ■ Catalogs

- Technical note / Compound semiconductor photosensors

Information described in this material is current as of July 2026.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.