


Si PIN photodiode

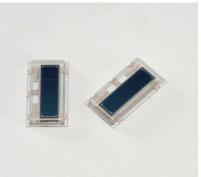

S9345

Dual-element photodiode using newly developed small, thin package

The S9345 is a dual-element Si PIN photodiode employing a newly developed small, thin plastic package. The cubic volume reduced to one-fifth that of similar type photodiodes using conventional package. In order to extend the detection area when used as a reflection-mode optical switch, the entire photodiode photosensitive area of 1.5 mm wide and 5.6 mm long is asymmetrically segmented into 2 longitudinal sections of 1.5 mm and 4.1 mm.

Features

- Applications
- Miniature and thin plastic package: 3.4 × 7.0 × 0.95 t mm
- Optical switches

- **■** Surface mount type
- **■** Asymmetrical dual-element PIN photodiode
- **→** Photosensitive area

Photodiode A: 1.5 × 1.5 mm Photodiode B: 1.5 × 4.1 mm

High sensitivity

♣ Absolute maximum ratings (Ta=25 °C)

Parameter	Symbol	Value	Unit
Reverse voltage	VR max	20	V
Operating temperature	Topr	-25 to +85	°C
Storage temperature	Tstg	-40 to +100	°C
Reflow soldering conditions*1	Tsol	Peak temperature 235 °C, 1 time (see page 3)	-


^{*1:} JEDEC level 5a

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.


■ Electrical and optical characteristics (Ta=25 °C, per 1 element)

Pa	rameter	Symbol	Condition	Min.	Тур.	Max.	Unit
Spectral respo	onse range	λ		-	320 to 1100	-	nm
Peak sensitivi	ty wavelength	λр		-	960	-	nm
Photosensitivi	ity	S	λ=780 nm	0.5	0.55	-	A/W
Short circuit	Photodiode A	Isc	VR=0 V, 2856 K	-	2.6	-	μΑ
current	Photodiode B		100 lx	-	7.1	-	
Dark current		ID	VR=10 V, all elements	-	0.4	5	nA
Terminal Photodiode A	Photodiode A	Ct	VR=10 V, f=1 MHz	-	4	8	pF
capacitance	Photodiode B			-	10	20	
Cutoff freque	ncy	fc	VR=10 V, RL=50 Ω λ=780 nm, -3 dB	7	15	-	MHz


Spectral response

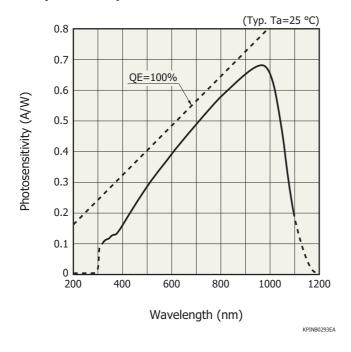


Photosensitivity temperature characteristics

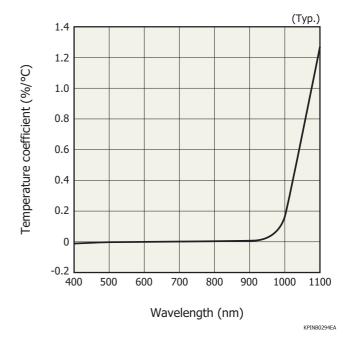


₽ Dark current vs. reverse voltage

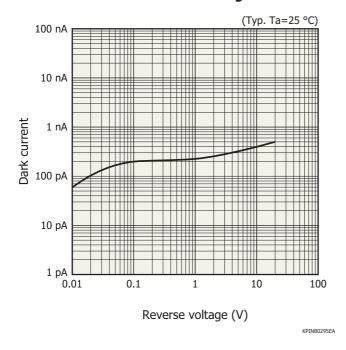


Terminal capacitance vs. reverse voltage

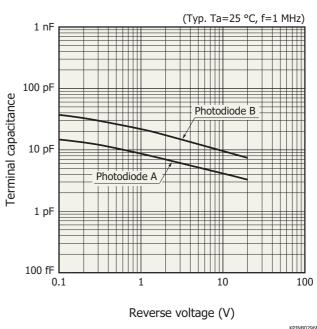

Dimensional outline (unit: mm)

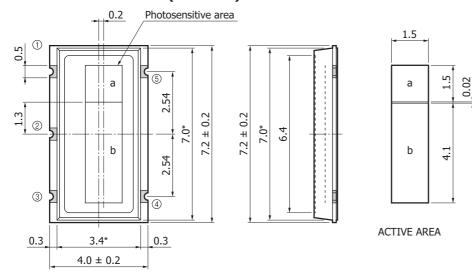

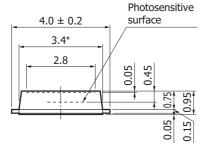

- ① Anode A
- ② Cathode common
- ③ Anode B
- Cathode common
- ⑤ Cathode common


Tolerance unless otherwise noted: ± 0.1 , $\pm 2^{\circ}$ Chip position accuracy with respect to the package dimensions marked *

 $X, Y \le \pm 0.2, \theta \le \pm 2^{\circ}$ Electrodes

Part of the lead frame on the bottom of the package might not be covered with epoxy resin. Don't contact this device to a conductor for protecting from short circuit.


KPINA0095EB

- Recommended land pattern (unit: mm)

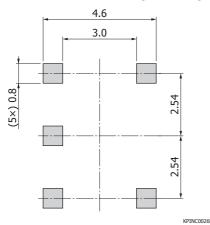

Measured example of temperature profile with our hot-air reflow oven for product testing

This product supports lead-free soldering. After unpacking, store it in an environment at a temperature of from 5 to 30 °C and a humidity of 60% or less, and perform soldering within 24 hours.

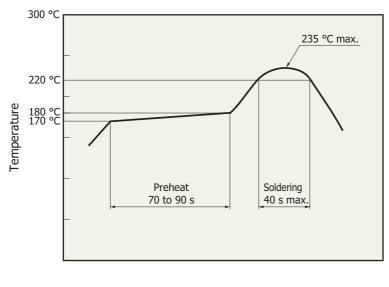

Time

KPINB0394EB

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

- Precautions
- · Notice
- · Surface mount type products
- Technical information
- · Si photodiode / Application circuit examples

Information described in this material is current as of November, 2014.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use.

Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81) 53-434-3311, Fax: (81) 53-434-5184
U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218
Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 8152-375-0, Fax: (49) 8152-365-8
France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saulue Trapu, Parc du Moulin de Massy, 1882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 00
United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777
North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46) 8-509-031-01
Italy: Hamamatsu Photonics Italia S.A.I.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39) 02-93581733, Fax: (39) 02-93581731
China: Hamamatsu Photonics (China) Co., Ltd.: B1201, Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, Beijing 100020, China, Telephone: (86) 10-6586-6006, Fax: (86) 10-6586-6006, Fax: (86) 10-6586-2866